


PROSLIDER is a sloping terminal transition profile designed to join different height floors in a perfect, stepless way. This particularly sturdy profile withstands and supports high loads and frequent passage of manual trolleys and vehicles in addition to protecting the edge of the higher floor. **PROSLIDER** is used in particular to join tile or wood to an existing floor.

Available in natural and anodized silver aluminium in various heights to accommodate all differences in level.

PROSLIDER

NATURAL ALUMINIUM AND ANODIZED SILVER ALUMINIUM

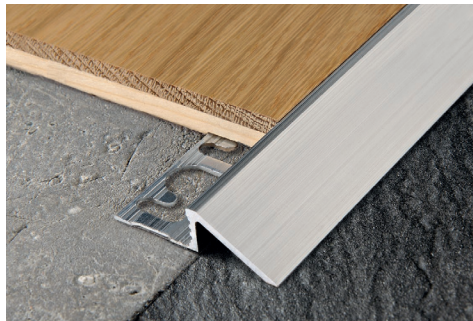


NATURAL ALUMINIUM thermo packed 5 Pcs
bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm
PDAN 08	8
PDAN 10	10
PDAN 125	12,5

ANODIZED SILVER ALUMINIUM thermo packed
bar length 2,7 lm - pack. 40 Pcs - 108 lm


Article	H mm
PDAА 08	8
PDAА 10	10
PDAА 125	12,5

COLOURS

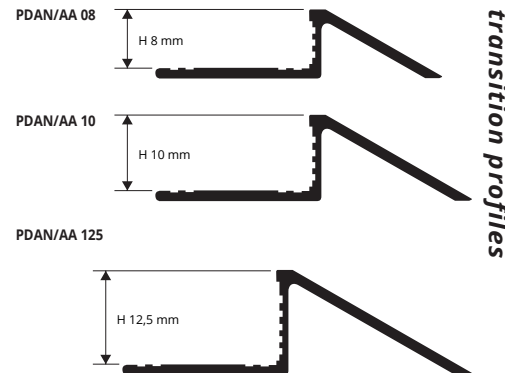

transition profiles

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

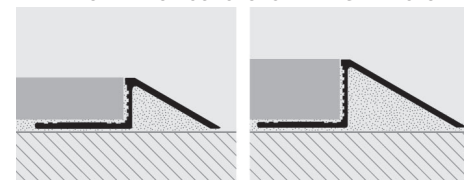


1. Choose the profile with the required height H, material and finish.
2. Fill the profile cavity with adhesive and apply the adhesive onto the area of application.
3. Lay the "PROSLIDER".
4. Align it "flush" with the floor/covering.
5. Use the adhesive to seal any empty interstices.

PROSLIDER LR is a sloping terminal transition profile designed to join different height floors in a perfect, stepless way. This particularly sturdy profile withstands and supports high loads and frequent passage of manual trolleys and vehicles in addition to protecting the edge of the higher floor. **PROSLIDER LR** is used in particular to join tile or wood to an existing floor.

Available in natural and anodized silver aluminium in various heights to accommodate all differences in level.

PROSLIDER LR

NATURAL ALUMINIUM AND ANODIZED SILVER ALUMINIUM

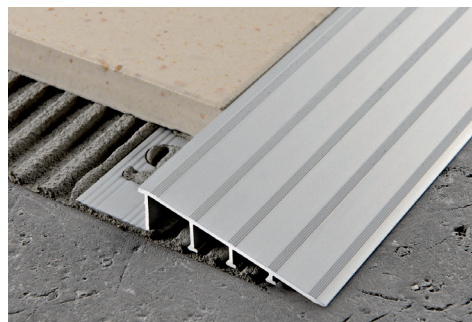


NATURAL ALUMINIUM thermo packed 5 Pcs
bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm
PDLRAN 10	10
PDLRAN 125	12,5
PDLRAN 15	15
PDLRAN 20	20

ANODIZED SILVER ALUMINIUM thermo packed
bar length 2,7 lm - pack. 20 Pcs - 54 lm

Article	H mm
PDLRAА 10	10
PDLRAА 125	12,5
PDLRAА 15	15
PDLRAА 20	20

COLOURS

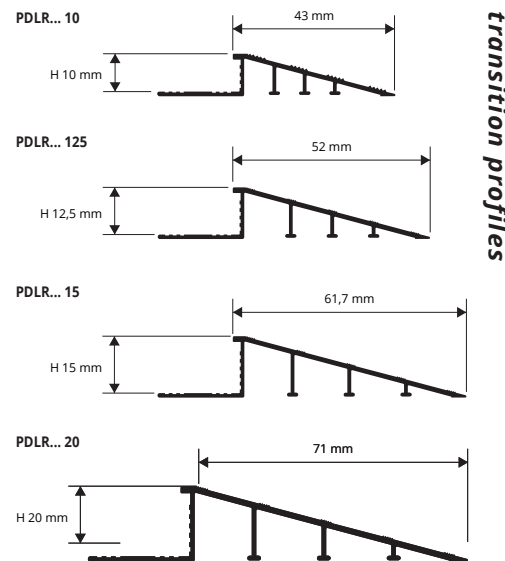

transition profiles

INSTRUCTIONS FOR LAYING

1. Choose the profile with the required height H, material and finish.
2. Fill the profile cavity with adhesive and apply the adhesive onto the area of application.
3. Lay the "PROSLIDER LR".
4. Align it "flush" with the floor/covering.
5. Use the adhesive to seal any empty interstices.

EXAMPLES OF LAYING

