

# PROTERRACE **DRAIN FDP**

VARNISHED/COATED ALUMINIUM

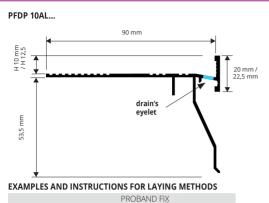


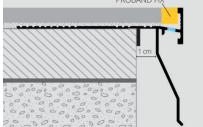


1. Choose PROTERRACE DRAIN FDP according to the tile thickness and desired colour. 2. Fix the external corners to the screed with and using care to separate them at least 1 cm from it **3**. Cut "PROTERRACE DRAIN FDP" to the desired length. Lay the profile and fix it with nails. Connect it with the corners using the junctions. **4**. Apply the desired waterproofing system, **5**. Lay the tiles, leaving about 5 mm between tiles and profile. **6**. Seal the space between tiles and profile with PROBAND FIX (P.186).

## HOW TO REQUEST SEASIDE TREATMENT

When placing your order please add S to the article's nu Example: PFDP 10ALGF (seaside) = **PFDP 10ALGFS** le's number



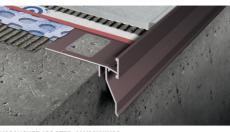

#### VARNISHED/COATED ALUMINIUM bar length 2,7 lm - pack. 5 Pcs - 13,5 lm


Article	Hmm	
PFDP 10AL	10	
PFDP 125AL	12,5	

Available in the colours: BF - GF - A - TF (EF - C - B - G - T - E on demand) The code of the selected colour must be added to the article code E.g.: PFDP 10 AL... (white) PFDP 10 ALB.

### EMBOSSED COLOURS

<b>BF</b> - White <b>(9010)</b>	<b>GF</b> - Grey <b>(7038)</b>	A - Anthracite grey (no RAL)	<b>TF</b> - Dark brown <b>(8019)</b>

# COLOURS ON DEMAND





EXTERNAL CORNERS - pack 10 Pcs

EXTERNAL CORNERS - pack. TO PCS	
Article	
AEPFDP 10AL/10	
AEPFDP 125AL/10	
INTERNAL CORNERS - pack. 10 Pcs	
Article	
AIPFDP 10AL/10	
AIPFDP 125AL/10	
JOINTS - pack. 1 Pc upper + 1 Pc lo	ower
Article	Hmm
GINFDPAL/1	10/125
Choose the desired height and finis E.g .: 10 mm joint with finish A - <b>GIN</b>	
DRAIN EYELET	GINEDP 10/125AL/1
L 210 mm	L 210 mm