


SKIRTING 6014

FOAMED VINYL RESIN

SKIRTING 6014 is a very light, stable and planar expanded vinyl resin profile, available in various colours. The profile is equipped with a flexible flange supporting the floor to ensure cleanliness and hygiene along the walls. The profile has good chemical resistance and can be fixed to the wall with PROBAND FIX, screws or nails. **SKIRTING 6014**, in expanded vinyl resin is suitable for any indoor floor.

BTEPR...

NEW

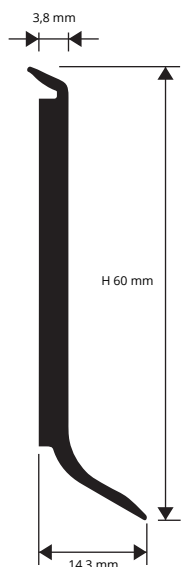

FOAMED VINYL RESIN
bar length 2,2 lm - pack. 25 Pcs - 55 lm

Article	H mm		
BTEPRB 6014	60		
BTEPRN 6014	60		
BTEPRGS 6014	60		
BTEPRGC 6014	60		

COLOURS

B - White	GC - Light grey	GC - Dark grey
N - Black		

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

1. Choose "SKIRTING 6014 / 8014" according to the desired color. 2. Cut "SKIRTING 6014 / 8014" to the desired length. Laying with PROBAND FIX. 3. Carefully clean the substrate on which the profile will be laid from oil residues, grease and dirt in general. 4. On a dry surface, apply the PROBAND FIX. 5. Press the profile against the wall with proper pressure. 6. Laying with screws or nails.

USE PROBAND FIX FOR FIXING THE PROFILE TO THE WALL



(PAGE 324)


SKIRTING 8014

FOAMED VINYL RESIN

SKIRTING 8014 is a very light, stable and planar expanded vinyl resin profile, available in various colours. The profile is equipped with a flexible flange supporting the floor to ensure cleanliness and hygiene along the walls. The profile has good chemical resistance and can be fixed to the wall with PROBAND FIX, screws or nails. **SKIRTING 8014**, in expanded vinyl resin is suitable for any indoor floor.

BTEPR...

NEW

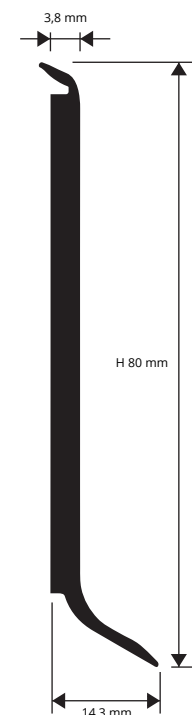

FOAMED VINYL RESIN
bar length 2,2 lm - pack. 25 Pcs - 55 lm

Article	H mm		
BTEPRB 8014	80		
BTEPRN 8014	80		
BTEPRGS 8014	80		
BTEPRGC 8014	80		

COLOURS

B - White	GC - Light grey	GC - Dark grey
N - Black		

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

1. Choose "SKIRTING 6014 / 8014" according to the desired color. 2. Cut "SKIRTING 6014 / 8014" to the desired length. Laying with PROBAND FIX. 3. Carefully clean the substrate on which the profile will be laid from oil residues, grease and dirt in general. 4. On a dry surface, apply the PROBAND FIX. 5. Press the profile against the wall with proper pressure. 6. Laying with screws or nails.

USE PROBAND FIX FOR FIXING THE PROFILE TO THE WALL



(PAGE 324)

= News 2024

* = Production on demand with minimum quantity of 100 Pcs. Production delay 4/5 weeks. Price to be agreed