



# PROJOLLY

BRUSHED ALUMINIUM

**PROJOLLY** is a rounded bead profile in brushed aluminium that can be applied on external corners of coverings. It can be used to close the perimeter of coverings and like a connection profile between step tread and riser of stairs coated with ceramic or natural stone tiles. Its particular section and elegance, the availability in four different finishes and special pieces such as internal and external corners, end caps and joints make **PROJOLLY** a much sought-after and elegant profile that allows a workmanlike application.

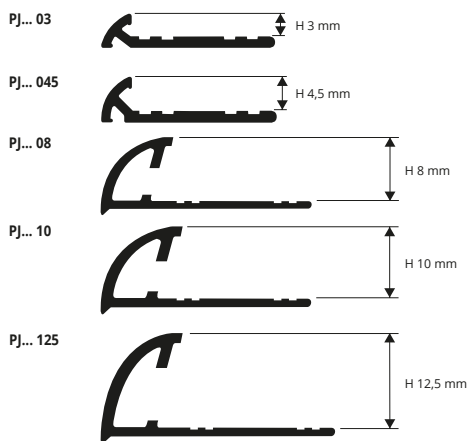

### EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS

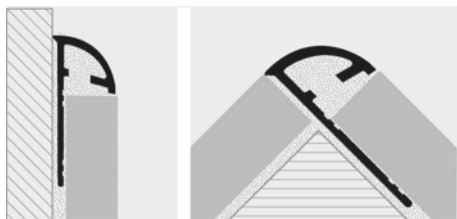

1. Choose "PROJOLLY" according to the tile thickness and desired finish.
2. Cut "PROJOLLY" to the desired length and apply the adhesive on the support where the profile will be laid.
3. Press the anchoring flange of "PROJOLLY" into the adhesive.
4. Lay the tiles, aligning them with the profile leaving a 2 mm joint. Remove immediately all remains of adhesive from the surface of the profile.
5. Fill the joints between the profile and the tiles with grout, in order to avoid water stagnation. Remove immediately all the remains of grout from the surface of the profile.



**BRUSHED POLISHED ALUMINIUM** (silver-gold-copper-titanium-black)  
thermo packed - bar length 2,7 lm - pack. 40 Pcs - 108 lm

Article	H mm		
PJBS 03	3		
PJBS 045	4,5		
PJBS 08	8		
PJBS 10	10		
PJBS 125	12,5		
PJRS 03	3		
PJRS 045	4,5		
PJRS 08	8		
PJRS 10	10		
PJRS 125	12,5		
PJBOS 03	3		
PJBOS 045	4,5		
PJBOS 08	8		
PJBOS 10	10		
PJBOS 125	12,5		
PJTS 03	3		
PJTS 045	4,5		
PJTS 08	8		
PJTS 10	10		
PJTS 125	12,5		
PJNS 08	8		
PJNS 10	10		
PJNS 125	12,5		



### COLOURS



AVAILABLE MINIMUM QUANTITY 100 PCS by colour and height



(Price to be agreed. Production delay 4/5 weeks)

## CAPSULES, END CAPS and THREE-WAYS JOINTS

\* Capsules & end caps of the on demand profiles are also on demand

BRUSHED POLISHED ALUMINIUM (silver, copper, titanium, black) / PLASTIC

### LEFT CAPSULES - BRUSHED POLISHED ALUMINIUM

silver-gold-copper-titanium-black

Article	H mm	Pack 10 Pcs	Pack 2 Pcs
CPJBS .../...	08/10/125		
IPJBS .../...	08/10/125		
TPJBS .../...	08/10/125		
CPJBOS .../...	08/10/125		
IPJBOS .../...	08/10/125		
TPJBOS .../...	08/10/125		
CPJRS .../...	08/10/125		
IPJRS .../...	08/10/125		
TPJRS .../...	08/10/125		
CPJTS .../...	08/10/125		
IPJTS .../...	08/10/125		
TPJTS .../...	08/10/125		
CPJNS .../...	08/10/125		
IPJNS .../...	08/10/125		
TPJNS .../...	08/10/125		

Choose the desired pack & height  
Ex.: 4,5 mm capsule in 10 Pcs Pack - CPJBS 10/10

### JOINTS - PLASTIC

Article	H mm	Pack 10 Pcs	Pack 2 Pcs
GIJA .../...	08/10/125		

Choose the desired pack & height  
Ex.: 10 mm joint in 10 Pcs Pack - GIJA 10/10

#### EXTERNAL CAPSULES



CPJ... .../...



CPJD... .../...

#### INTERNAL CAPSULES



IPJ... .../...



IPJD... .../...

The right capsules are available on demand and must be used only in the following cases:

A) when you are laying the cut base of the profile perpendicularly on the floor;



Add "D" to the article code. For example: CPJDBS 08.



Add "D" to the article code. For example: IPJDBS 08.

B) as an alternative to end-caps (right side).



#### LEFT CAPSULES

Add "D" to the article code. For example: CPJDBS 08.

#### RIGHT CAPSULES

#### END CAP



TPJ... .../...

#### JOINT



GIJA .../...